




VERSUS
REF: K51100.RF



**INSTALLATION
INSTRUCTIONS**



V.01

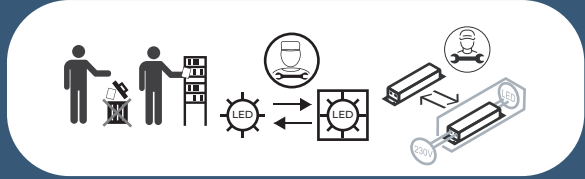

K51100.01
Ø60mm | 5W
h 70 mm

***K51100.02**
Ø73mm | 10W
h 87 mm

K51100.03
Ø80mm | 15W
h 100 mm

1 ON OFF

2 CUT OUT

	A
01	Ø55mm
02	Ø66mm
03	Ø75mm

3

4

PUSH THE WINGS AND INSERT IN THE HOLE

ON-OFF **PUSH1** **DALI**

1-10V **PUSH2** **PHASE CUT**

*Model 02 don't work with 1.10V

Security h+20 mm

5

